


Instructions for Electric Cooker & Oven

www.corfuwillagreece.com/instructions

ELECTRIC COOKER

Model: Beko HNIC64400T

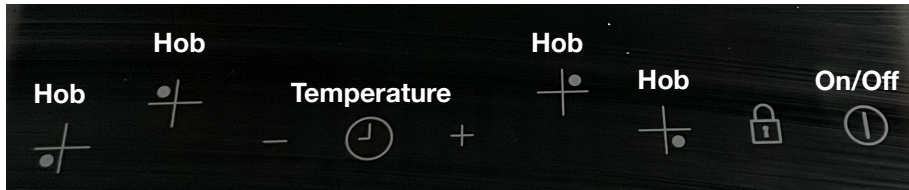

1. Long press the '**On/Off**' button for 1 second to turn on or off
2. Long press the '**Hob**' you want to use for 1 second to select
3. Press the '-' or '+' buttons to increase/decrease the temperature of the Hob (range is from 1 - 9)

After you have turned off the Hob, it may show '**H**' for 'hot' until the Hob cools down.

If '**A**' appears, it means the temperature is being boosted. To cancel the boost, long press '-' until the display goes down to '0'.

OVEN

Model: Beko BIE110X



1. Choose your Function setting (we recommend the fan or the grill setting)
2. Choose your Temperature setting e.g. 180 degrees
3. Set the Timer (e.g. 40 minutes) for desired cooking time and the oven will start heating