

# Instructions for Dishwasher

www.corfuwillagreece.com/instructions

## DISHWASHER

Model: Beko Pro Smart Inverter



**1. Add Dishwasher Tablet**  
(You can add Rinse Aid if running low)



**2. Choose your programme then press start**  
(For general wash we recommend 'Quick & Shine')

### Programme Choices

<b>Number</b>	<b>Name</b>	<b>Purpose</b>	<b>Duration (mins)</b>
0	Innerclean	For cleaning dishwasher every 2 months. Use while empty	75
1	Eco	For medium soiled dishes (most economical)	223
2	Auto	Automatically chooses appropriate the setting according to the dishes inside.	100-180
3	Intensive	For heavily soiled dishes, pots & pans	148
4	Quick & Shine	For normally soiled dishes (fast wash)	58
5	Mini 30	For lightly soiled dishes that are pre-cleaned	30
6	Prewash	For removing remnants on soiled dishes before full wash	15

To cancel a programme, press and hold the Start button for 3 seconds.