

# Instructions for Washing Machine


[www.corfuvillagreece.com/instructions](http://www.corfuvillagreece.com/instructions)

## WASHING MACHINE (Model: Philco PWM 749)

### 1. Add Detergent & Softener (You don't normally need pre-wash)




### 2. Choose your programme (For general wash we recommend Fast 60 minutes)

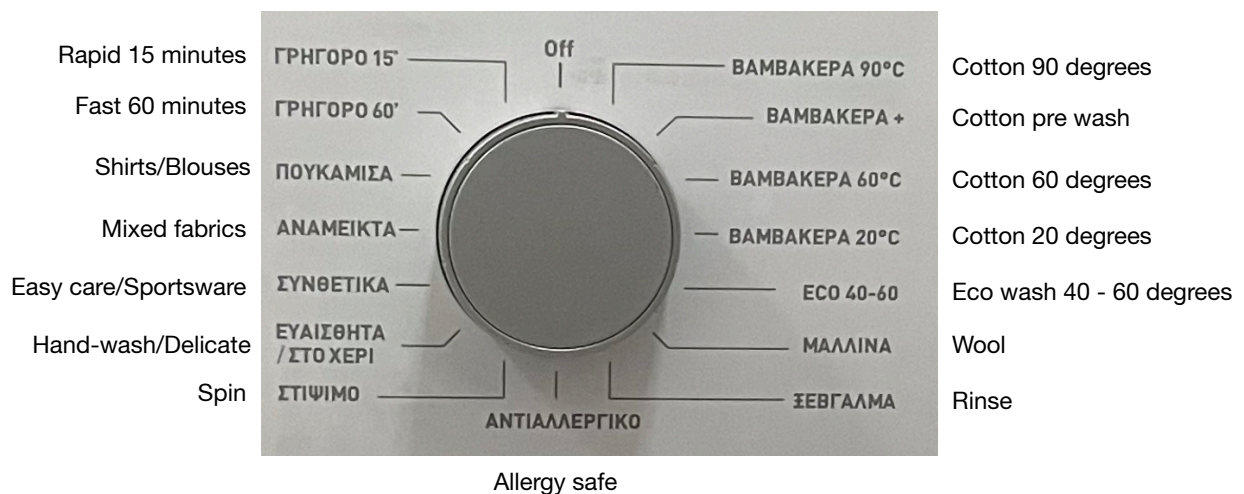

### 3. Make your changes

(You can adjust temperature and spin speed. We recommend temperature of 40 degrees)

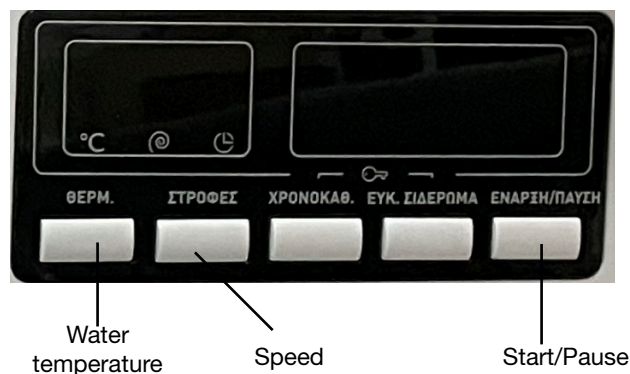

To cancel a programme, turn the dial to 'Off' then turn the dial to any programme and the machine will drain out the water and beep when completed and hold the Start button for 3 seconds.